

TypeMatrix USB-2030-B

Esc	Dvorak F1	102 F2	106 F3	F4	F5	Del Ins	F6	Power F7	Sleep F8	Wake F9	Prt.Sc. F10	Scroll F11	Pause F12	N.lock Num		
~	1	2	3	4	5	Del Ins	6	7	8	9	0	-	=	Num		
↩	Q	W	E	R	T	Del Ins	Y	U	I	O	P	{	}	Mail		
↑	A	S	D	F	G	Del Ins	H	J	K	L	;	'	↑	AC		
	Z	X	C	V	B	Del Ins	N	M	,	.	/	\	+	Settings		
Ctrl	play cut	menu copy	shuffle paste	TypeMatrix™					dsktp	↩	↑	↘	3	Ctrl	⇄	
Fn	Start	Alt							mute	Alt	←	↓	00	→	Enter	⇄

This is only a simplified schema of the USB-2030 design. A few labels should be replaced by symbols (e.g. vol+/-/mute), and other details are likely to change. The 5 bumps on Del, F, J, num.5 and num.00 are not represented in the PDF document.

The modifier keys (Shift, Ctrl, Alt, Start, Fn) are consistent in all layers; if possible, **the membrane should be designed to support two additional modifier keys: 'shuffle/dsktp'** (on this schema). The idea is to let users to remap these keys as 'Alt', for example:

- some Japanese users might want to switch 'Alt' keys with 'henkan/muhenkan';
- some European users might want to have two 'AltGr' keys instead of 'Alt/AltGr', and use 'shuffle/dsktp' as two 'Alt' keys.

Note that a few keys do not use HID codes from the ['standard keyboard' page \(#7\)](#):

- 3 keys send 'generic desktop' codes (page #1): power, sleep, wake
- 11 keys send 'consumer' codes (page #12): play, vol+/-/mute, prev/next, back/forward, calc, mail, web
- 6 keys send a combo: cut (Ctrl+X), copy (Ctrl+C), paste (Ctrl+V), BTab (Shift+Tab), shuffle (Alt+Tab), desktop (Start+D)
- the numeric 00 sends the standard keyboard HID code '0x62' twice
- «Fn», «Num», «Dvorak», «102», «106» do not send any HID code (internal usage)

The full description of the key mapping is described in the next pages.

TypeMatrix USB-2030-B-US

Esc t11 29	F1 t12 3a	F2 t13 3b	F3 t14 3c	F4 t15 3d	F5 t16 3e	Delete t17 4c	F6 t18 3f	F7 t19 40	F8 t1a 41	F9 t1b 42	F10 t1c 43	F11 t1d 44	F12 t1e 45	Num t1f
~ t21 35	1 t22 1e	2 t23 1f	3 t24 20	4 t25 21	5 t26 22	Back space t27 2a	6 t28 23	7 t29 24	8 t2a 25	9 t2b 26	0 t2c 27	- t2d 2d	= t2e 2e	calc t2f 0192
Tab t31 2b	Q t32 14	W t33 1a	E t34 08	R t35 15	T t36 17	Enter t47 28	Y t38 1c	U t39 18	I t3a 0c	O t3b 12	P t3c 13	{ t3d 2f	}	mail t3f 018a
Shift t41 e1	A t42 04	S t43 16	D t44 07	F t45 09	G t46 0a	Enter t47 28	H t48 0b	J t49 0d	K t4a 0e	L t4b 0f	; t4c 33	' t4d 34	Shift t4e e5	caps t4f 39
	Z t52 1d	X t53 1b	C t54 06	V t55 19	B t56 05		N t58 11	M t59 10	, t5a 36	. t5b 37	/\ t5c 38	 t5d 31		web t5f 0223
Ctrl t61 e0	play t62 00cd	app t63 65	shuffle t64 e2+2b					desktop t6a e3+07	Home t6b 4a	↑ t6c 52	End t6d 4d	Ctrl t6e e4	PgUp t6f 4b	
Fn t71	Start t72 e3	Alt t73 e2	t65 2c				Alt t7a e6	← t7b 50	↓ t7c 51	→ t7d 4f	PgDn t7f 4e			

Layout 'USB-2030-B' rev. 105

- this key must be mapped as a modifier key
- this key should be mapped as a modifier key, if possible
- this key has been changed from the main layer (US)
- this key belongs to the Fn layer only
- this key belongs to the Fn and Num layers

[xx] keyboard codes

Most keys send standard 'keyboard' codes (page #7)

Warning: 3 keys send 'generic desktop' codes (page #1): power, sleep, wake

[xxxx] 'consumer' codes (page #12)

11 keys send long HID codes: play, vol+/-/mute, prev/next track, prev/next page, calc, mail, web

[xx]+[xx] combos

6 keys send a combo: cut (Ctrl+X), copy (Ctrl+C), paste (Ctrl+V), BTab (Shift+Tab), shuffle (Alt+Tab), desktop (Start+D)

[xx] [xx]

The numeric 00 sends the standard keyboard HID code '0x62' twice

TypeMatrix USB-2030-B-DV

Esc t11 29	F1 t12 3a	F2 t13 3b	F3 t14 3c	F4 t15 3d	F5 t16 3e	Delete t17 4c	F6 t18 3f	F7 t19 40	F8 t1a 41	F9 t1b 42	F10 t1c 43	F11 t1d 44	F12 t1e 45	Num t1f
~ t21 35	1 t22 1e	2 t23 1f	3 t24 20	4 t25 21	5 t26 22	Back space t27 2a	6 t28 23	7 t29 24	8 t2a 25	9 t2b 26	0 t2c 27	[t2d 2f] t2e 30	calc t2f 0192
Tab t31 2b	' t32 34	, t33 36	. t34 37	P t35 13	Y t36 1c	Enter t47 28	F t38 09	G t39 0a	C t3a 06	R t3b 15	L t3c 0f	/ t3d 38	= t3e 2e	mail t3f 018a
Shift t41 e1	A t42 04	O t43 12	E t44 08	U t45 18	I t46 0c	Enter t47 28	D t48 07	H t49 0b	T t4a 17	N t4b 11	S t4c 16	- t4d 2d	Shift t4e e5	caps t4f 39
	; t52 33	Q t53 14	J t54 0d	K t55 0e	X t56 1b		B t58 05	M t59 10	W t5a 1a	V t5b 19	Z t5c 1d	\ t5d 31		web t5f 0223
Ctrl t61 e0	play t62 00cd	app t63 65	shuffle t64 e2+2b					desktop t6a e3+07	Home t6b 4a	↑ t6c 52	End t6d 4d	Ctrl t6e e4	PgUp t6f 4b	
Fn t71	Start t72 e3	Alt t73 e2	t65 2c				Alt t7a e6	← t7b 50	↓ t7c 51	→ t7d 4f	PgDn t7f 4e			

Layout 'USB-2030-B' rev. 105

- this key must be mapped as a modifier key
- this key should be mapped as a modifier key, if possible
- this key has been changed from the main layer (US)
- this key belongs to the Fn layer only
- this key belongs to the Fn and Num layers

[xx] keyboard codes

Most keys send standard 'keyboard' codes (page #7)

Warning: 3 keys send 'generic desktop' codes (page #1): power, sleep, wake

[xxxx] 'consumer' codes (page #12)

11 keys send long HID codes: play, vol+/-/mute, prev/next track, prev/next page, calc, mail, web

[xx]+[xx] combos

6 keys send a combo: cut (Ctrl+X), copy (Ctrl+C), paste (Ctrl+V), BTab (Shift+Tab), shuffle (Alt+Tab), desktop (Start+D)

[xx] [xx]

The numeric 00 sends the standard keyboard HID code '0x62' twice

TypeMatrix USB-2030-B-102

Esc t11 29	F1 t12 3a	F2 t13 3b	F3 t14 3c	F4 t15 3d	F5 t16 3e	Delete t17 4c	F6 t18 3f	F7 t19 40	F8 t1a 41	F9 t1b 42	F10 t1c 43	F11 t1d 44	F12 t1e 45	Num t1f
~ t21 35	1 t22 1e	2 t23 1f	3 t24 20	4 t25 21	5 t26 22	Back space t27 2a	6 t28 23	7 t29 24	8 t2a 25	9 t2b 26	0 t2c 27	- t2d 2d	= t2e 2e	calc t2f 0192
Tab t31 2b	Q t32 14	W t33 1a	E t34 08	R t35 15	T t36 17	Enter t47 28	Y t38 1c	U t39 18	I t3a 0c	O t3b 12	P t3c 13	{ t3d 2f	}	mail t3f 018a
Shift t41 e1	A t42 04	S t43 16	D t44 07	F t45 09	G t46 0a	Enter t47 28	H t48 0b	J t49 0d	K t4a 0e	L t4b 0f	; t4c 33	' t4d 34	Shift t4e e5	caps t4f 39
	Z t52 1d	X t53 1b	C t54 06	V t55 19	B t56 05		N t58 11	M t59 10	, t5a 36	. t5b 37	/\ t5c 38	 t5d 31		web t5f 0223
Ctrl t61 e0	< t62 64	app t63 65	shuffle t64 e2+2b					desktop t6a e3+07	Home t6b 4a	↑ t6c 52	End t6d 4d	Ctrl t6e e4	PgUp t6f 4b	
Fn t71	Start t72 e3	Alt t73 e2	t65 2c				AltGr t7a e6	← t7b 50	↓ t7c 51	→ t7d 4f	PgDn t7f 4e			

Layout 'USB-2030-B' rev. 105

- this key must be mapped as a modifier key
- this key should be mapped as a modifier key, if possible
- this key has been changed from the main layer (US)
- this key belongs to the Fn layer only
- this key belongs to the Fn and Num layers

[xx] keyboard codes

Most keys send standard 'keyboard' codes (page #7)

Warning: 3 keys send 'generic desktop' codes (page #1): power, sleep, wake

[xxxx] 'consumer' codes (page #12)

11 keys send long HID codes: play, vol+/-/mute, prev/next track, prev/next page, calc, mail, web

[xx]+[xx] combos

6 keys send a combo: cut (Ctrl+X), copy (Ctrl+C), paste (Ctrl+V), BTab (Shift+Tab), shuffle (Alt+Tab), desktop (Start+D)

[xx] [xx]

The numeric 00 sends the standard keyboard HID code '0x62' twice

TypeMatrix USB-2030-B-106

Esc t11 29	F1 t12 3a	F2 t13 3b	F3 t14 3c	F4 t15 3d	F5 t16 3e	Delete t17 4c	F6 t18 3f	F7 t19 40	F8 t1a 41	F9 t1b 42	F10 t1c 43	F11 t1d 44	F12 t1e 45	Num t1f
zenhan	1	2	3	4	5	Back space t27 2a	6	7	8	9	0	-	^	¥
Tab t31 2b	Q t32 14	W t33 1a	E t34 08	R t35 15	T t36 17		Y t38 1c	U t39 18	I t3a 0c	O t3b 12	P t3c 13	@ t3d 2f	[t3e 30] t3f 31
Shift t41 e1	A t42 04	S t43 16	D t44 07	F t45 09	G t46 0a	Enter t47 28	H t48 0b	J t49 0d	K t4a 0e	L t4b 0f	; t4c 33	: t4d 34	Shift t4e e5	caps t4f 39
	Z t52 1d	X t53 1b	C t54 06	V t55 19	B t56 05		N t58 11	M t59 10	,	.	/	\ t5d 86		kana t5f 88
Ctrl t61 e0	play t62 00cd	app t63 65	muhenkan t64 8b	t65			henkan t6a 8a	Home t6b 4a	↑ t6c 52	End t6d 4d	Ctrl t6e e4	PgUp t6f 4b		
	Start t72 e3		Alt t73 e2				Alt t7a e6	← t7b 50	↓ t7c 51	→ t7d 4f		PgDn t7f 4e		

Layout 'USB-2030-B' rev. 105

- this key must be mapped as a modifier key
- this key should be mapped as a modifier key, if possible
- this key has been changed from the main layer (US)
- this key belongs to the Fn layer only
- this key belongs to the Fn and Num layers

[xx] keyboard codes

Most keys send standard 'keyboard' codes (page #7)

Warning: 3 keys send 'generic desktop' codes (page #1): power, sleep, wake

[xxxx] 'consumer' codes (page #12)

11 keys send long HID codes: play, vol+/-/mute, prev/next track, prev/next page, calc, mail, web

[xx]+[xx] combos

6 keys send a combo: cut (Ctrl+X), copy (Ctrl+C), paste (Ctrl+V), BTab (Shift+Tab), shuffle (Alt+Tab), desktop (Start+D)

[xx] [xx]

The numeric 00 sends the standard keyboard HID code '0x62' twice

TypeMatrix USB-2030-B-Fn

t11	Dvorak t12	102 t13	106 t14	t15	t16	Insert t17 49	t18	Power t19 81	Sleep t1a 82	Wake t1b 83	Prt.Sc. t1c 46	Scroll t1d 47	Pause t1e 48	N.Lock t1f 53
t21	t22	t23	t24	t25	t26	vol+ t27 00e9	t28	t29	t2a	t2b	t2c	t2d	t2e	calc t2f 0192
t31	t32	t33	t34	t35	t36	vol- t47 00ea	Home t48 4a	↑ t49 52	End t4a 4d	7 t4b 5f	8 t4c 60	9 t4d 61	+ t4e 57	BTab t3f e5+2b
t41	t42	t43	t44	t45	t46		← t58 50	↓ t59 51	→ t5a 4f	4 t5b 5c	5 t5c 5d	6 t5d 5e		clear t4f 29
	t52	t53	t54	t55	t56									BSpace t5f 2a
t61	cut t62 e4+1b	copy t63 e4+06	paste t64 e4+19	mute t65 00e2				prev t6a 00b6	1 t6b 59	2 t6c 5a	3 t6d 5b	Enter t6e 58	back t6f 0224	
Fn t71	Right Start t72	Right Alt t73 e7					next t7a 00b5	0 t7b 62	00 t7c 62 62	.t7d 63			forward t7f 0225	

Layout 'USB-2030-B' rev. 105

- this key must be mapped as a modifier key
- this key should be mapped as a modifier key, if possible
- this key has been changed from the main layer (US)
- this key belongs to the Fn layer only
- this key belongs to the Fn and Num layers

[xx] keyboard codes

Most keys send standard 'keyboard' codes (page #7)

Warning: 3 keys send 'generic desktop' codes (page #1): power, sleep, wake

[xxxx] 'consumer' codes (page #12)

11 keys send long HID codes: play, vol+/-/mute, prev/next track, prev/next page, calc, mail, web

[xx]+[xx] combos

6 keys send a combo: cut (Ctrl+X), copy (Ctrl+C), paste (Ctrl+V), BTab (Shift+Tab), shuffle (Alt+Tab), desktop (Start+D)

[xx] [xx]

The numeric 00 sends the standard keyboard HID code '0x62' twice

TypeMatrix USB-2030-B-Nm

t11	t12	t13	t14	t15	t16	t17	t18	t19	t1a	t1b	t1c	t1d	t1e	t1f	
t21	t22	t23	t24	t25	t26	t27	t28	t29	t2a	t2b	t2c	t2d	t2e	calc	
t31	t32	t33	t34	t35	t36	t37	t38	t39	t3a	Tab	/	*	-	BTab	
t41	t42	t43	t44	t45	t46	t47	Home	↑	End	7	8	9	+	clear	
t51	t52	t53	t54	t55	t56	t57	t48 4a	t49 52	t4a 4d	t4b 5f	t4c 60	t4d 61	t4e 57	t4f 29	
t61	t62	t63	t64	t65				←	↓	→	4	5	6	Enter	BSpace
Fn	t71		t72			t73		t58 50	t59 51	t5a 4f	t5b 5c	t5c 5d	t5d 5e	t5f 2a	
t71	t72	t73	t65				t6a	1	2	3	0	00	.	t6e 58	t6f
t71	t72	t73	t65				t7a	t7b 62	t7c 62 62	t7d 63	t7b 62	t7c 62 62	t7d 63	t7e	t7f

Layout 'USB-2030-B' rev. 105

- this key must be mapped as a modifier key
- this key should be mapped as a modifier key, if possible
- this key has been changed from the main layer (US)
- this key belongs to the Fn layer only
- this key belongs to the Fn and Num layers

- [xx] keyboard codes
Most keys send standard 'keyboard' codes (page #7)
Warning: 3 keys send 'generic desktop' codes (page #1): power, sleep, wake
- [xxxx] 'consumer' codes (page #12)
11 keys send long HID codes: play, vol+/-/mute, prev/next track, prev/next page, calc, mail, web
- [xx]+[xx] combos
6 keys send a combo: cut (Ctrl+X), copy (Ctrl+C), paste (Ctrl+V), BTab (Shift+Tab), shuffle (Alt+Tab), desktop (Start+D)
- [xx] [xx]
The numeric 00 sends the standard keyboard HID code '0x62' twice